


# Dry-Matic Ventilation Kit


## Dry-Matic Ventilation Kit (Optional Extra for Dry-Matics)

Code	Description
DMVK	Diverting branch inlet from outside air (includes FESIT filter)

*DMVK Summer Vent Kit  
Can divert intake from attic to  
cooler outside air*

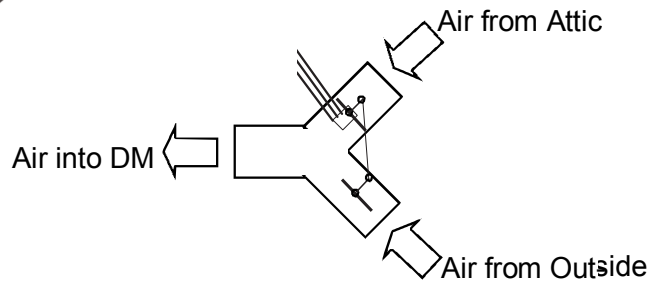

**Motorised Diverting Branch**

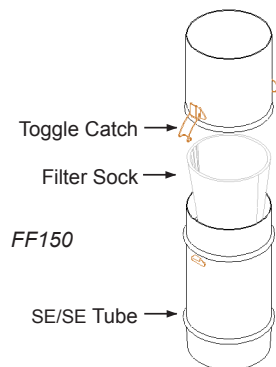

*Optional inline Filter sock*



*SOCK - filter*

The Dry-Matic Summer Ventilation Kit is an optional add-on for Digital Dry-Matics. It can be added during installation or several years after installation. The digital hall controller can be commissioned to control the motorised diverting branch damper, directing air intake from the cooler outside air for summer months. Again, the air intake filter, and the FESIT inline 'Sock' will need cleaning as below.

### Cleaning the filters

Although the Dry-Matic is designed to run continuously for years, the filters do need cleaning every 8 months or so for optimal performance (clean at least yearly).  
When the digital hall controller display starts flashing - this indicates it is time to clean the filters.  
The white filter bag can be machine washed on gentle cycle or hand washed - vacuum first to remove excess dust. Alternatively replace with a new one.  
The carbon filter inside the filter box should be checked - if it is showing signs of dust and dirt, it can be vacuumed clean or replaced. It is recommended to clean or replace every second year.

# Dry-Matic Wiring Diagram

